



## AGP Pellet Insert - Cheat Sheet

---

The AGP Pellet Insert has several new features and characteristics that require special attention during installation and set-up. Refer to the manuals for full details.

- **The blower will start and run up to 20 minutes once the heater is plugged in (red light will turn on).**  
This safety feature evacuates smoke from the heater after a power interruption.
- **AGP stands for “All Grade Pellets” – Burn Wood Pellets Only**  
This stove is only for use with wood pellets of any grade. Do not burn corn or other materials.
- **This Stove Requires a Door (purchased separately)**  
This stove is shipped without a door. Order 96100793 (Avalon) or 96100774 (Lopi).
- **This Stove Requires Side Panels (purchased separately)**  
This stove is shipped without side panels. Order Black (94400030), Patina (94400031), or Stainless (94400032).
- **This Stove has a “Smart Blower” and Various “Thermostat Modes”**  
This stove has an improved circuit board that allows the blower speed to vary with burn rate. The circuit board also has thermostat programs to control the stove in a more sophisticated manner. See manual for details.
- **Burnpot Tool is Included in the Owner’s Pack**  
The included burnpot tool has two sides that allow you to scrape the burnpot and clean out any clogged burnpot openings. See manual for details.
- **New Wall Thermostat (99300687) Fits Directly Into the Stove**  
The new wall-mounted thermostat fits directly into the stove. See instruction sheet for details.
- **New Pellet-Feed System Doesn’t Require Priming**  
This stove uses a new feed system for feeding pellets to the firebox. When first used, or if pellets run out, the pellet stove will start normally after a 3 – 5 minute delay.