




TRAVIS INDUSTRIES
HOUSE OF FIRE

Addendum to Travis 8" Minimum Rear Vent Kit Instructions SKU# 98900168

- Packing List:**
- High Wind Sconce Cap
 - 3.9" Vent Section
 - Exterior Filler Plate
 - Hardware Pack
 - Instructions

Installation: The Sconce Cap, a new style horizontal termination cap, has been added to the Travis 8" Minimum Rear Vent Kit. Follow the Simpson venting instructions included, but also install the Exterior Filler Plate described below.

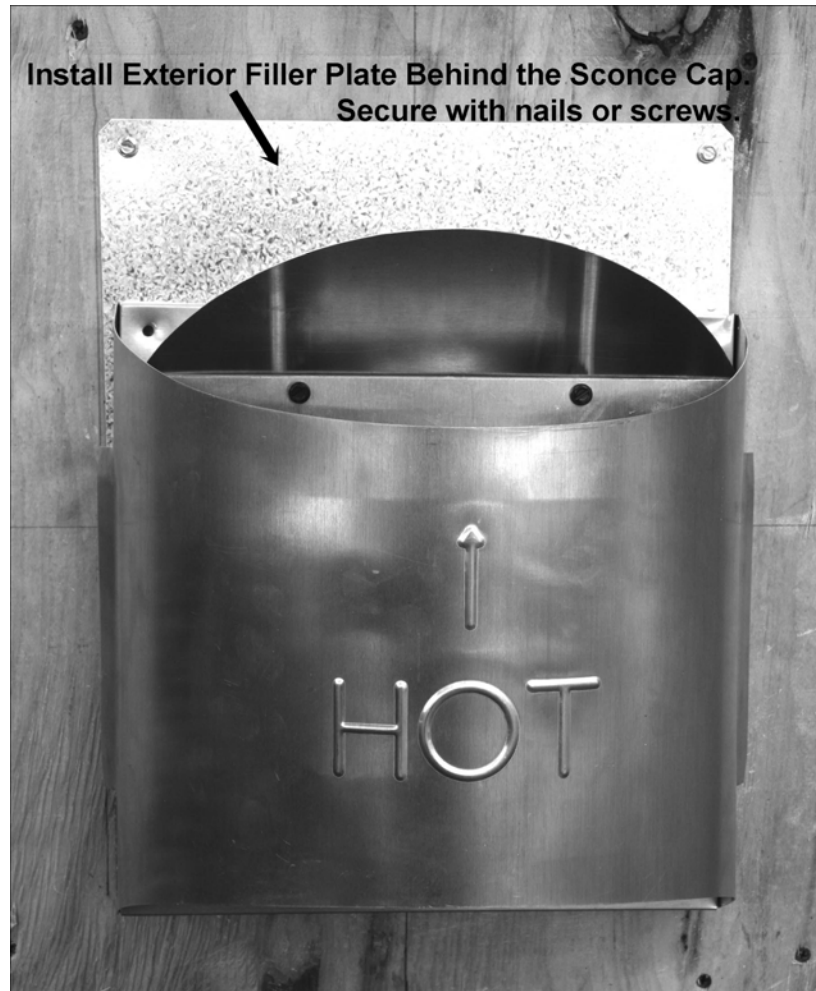

Exterior Filler Plate:

- Place the Exterior Filler plate over the vent connector of the sconce cap.
- Connect the sconce cap to the fireplace rear vent.
- Rotate the Exterior Filler Plate to cover the open space above the sconce cap and attach the filler plate to the exterior sheathing with screws or nails.
- Secure the sconce cap to the exterior sheathing with 4 screws from the hardware pack.
- Siding may cover the Exterior Filler Plate down to the top edge of the sconce cap.
- If vinyl siding is to be applied, you must install the Simpson Vinyl Siding Stand Off Kit, #46DVA-VSKS. After Step "C" above, remove the sconce cap, install the vinyl siding stand-off, then install the sconce cap and secure it to the vinyl siding stand-off.