



864 TRV GSR2 - Cheat Sheet

The 864 TRV GSR2 has several new features and characteristics that require special attention during installation and set-up. Refer to the owner's manual for full details.

GreenSmart™ 2

This heater has GreenSmart™ 2 components from SIT. These components function in a near identical fashion to the previous GreenSmart™ 1 components. The primary differences are:


- The accent light now has dimming capability built into the remote.
- The pilot may be switched from intermittent (IPI) to standing pilot from the remote.

Refer to the owner's manual for full details.

Remote Control / Pilot Warnings



Installing batteries in the battery holder or connecting the appliance to power may automatically initiate the CPI pilot mode, resulting in a lit pilot flame. Do not place combustibles in the firebox.

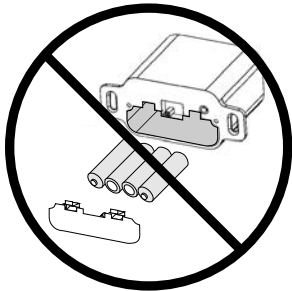

KEEP BATTERIES AND COVER INSTALLED AT ALL TIMES

The remote control system requires the batteries and battery cover to remain in place at all times. Once the batteries or cover are removed, the system may re-start in standing pilot mode. If this occurs when the heater is in Remote Mode, you will not be able to turn the heater off manually from the battery box.

If you need to replace dead batteries, make sure to **turn the appliance off** before removing the batteries.

NOTE: If the batteries go dead, the system will operate normally as long as household power is present.

Installation Warnings

- **Install Insulation when Converting to Rear Vent Configuration** The insulation is only used for rear vent configurations. Failure to install the insulation will create a safety hazard.
- **FPX Arched Upgrade Kit (98500686) Required When Using Arched Faces** The upgrade kit includes the mounting brackets and tiling guide. It must be installed prior to installing tile or other facing.
- **3" (77mm) Clearance Above Vent when Rear Vented** See manual for details.
- **Top Vent vs. Rear Vent** Depending upon top or rear vent configuration, maximum vent configuration may change. See installation manual for details.
- **May Use 6-5/8" (169mm) Vent in Top Vent Configuration** See manual for details.